


SAWDUST to *Sequins* and everything in-between

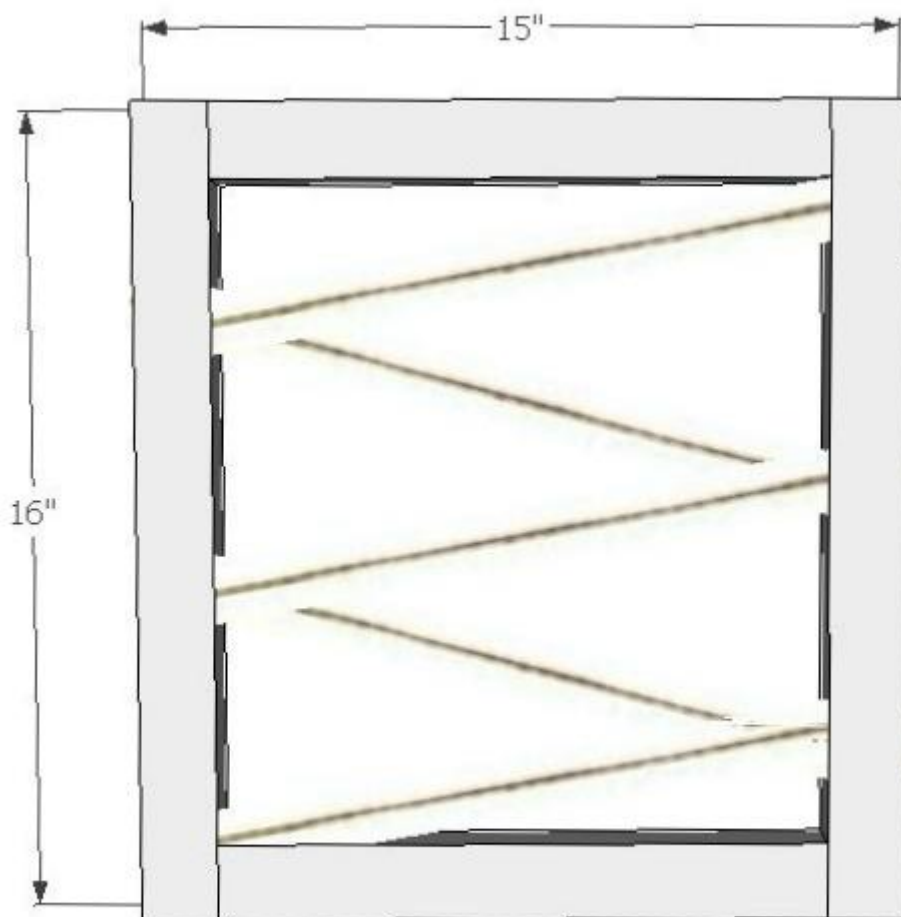

SAWDUST to *Sequins*

Valentine's Day Card Display

Copyright © 2016 Sawdust to Sequins

Tools

Saw

Drill

Pocket Hole Jig

Sander

Stapler

Supplies

Pocket Hole Screws

Sandpaper

Paint or Stain

Twine


Staples

Cut List

2x2 @ 12"
2x2 @ 12"
2x2 @ 16"
2x2 @ 16"

SAWDUST to *Sequins*

Pocket Hole Placement 2x2 @ 12"

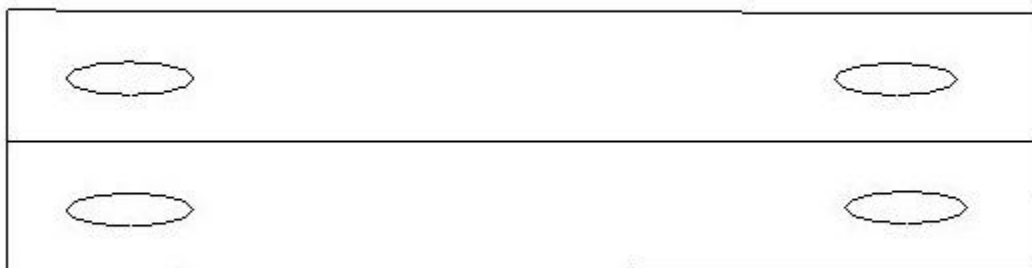


SAWDUST to *Sequins*

Step 1

Cut boards according to the cut list. Drill pocket holes according to pocket hole placement.


Step 2

Using the 2 ½" pocket hole screws, attach the 12" boards to the 16" boards.

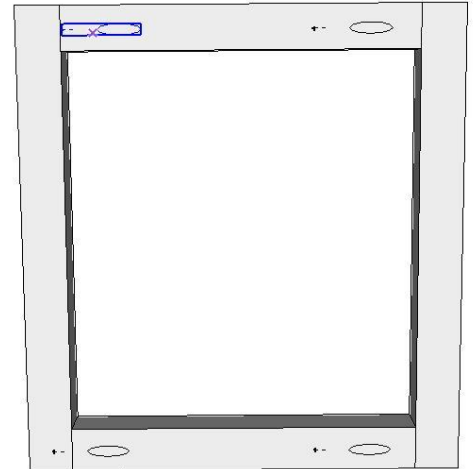

Step 3

Completely sand your frame and paint or stain.

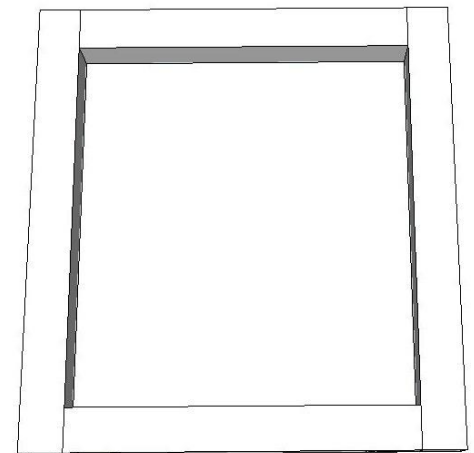


Step 4

With the stapler, attach the twine to the frame moving from side to side until you reach the top.

For more plans visit:

Sawdusttosequins.com

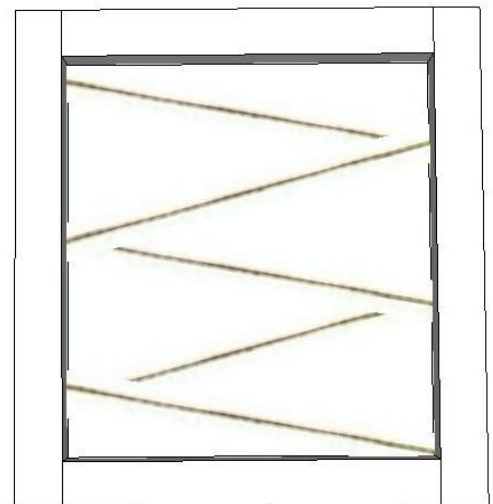

SAWDUST to Sequins